



OPERATING INSTRUCTIONS

WALDIS FURNITURE SAFE WITH SAFE LOCK PRIMOR 2600

Furniture safe with electronic safe lock



Many thanks!

Many thanks for choosing Waldis to give you the security you want.

Before starting to use your furniture safe, please read these instructions thoroughly!

Your contact in case of questions:

WALDIS Tresore AG

Hofwissenstrasse 20

CH-8153 Rümlang

Telephone: +41 43 211 12 00

Fax: +41 43 211 12 12

Email: info@tresore.ch


Table of contents

1. Overview	1
1.1. Operating controls: WALDIS furniture safe	1
2. Starting to use your safe.....	1
3. Operation	3
3.1. Opening the safe	3
3.2. Locking the safe.....	3
3.3. Reprogramming codes	4
3.4. Replacing the battery	5
4. Malfunctions.....	6
4.1. Battery.....	6
4.2. Tamper block	6
5. Anchoring.....	6
6. Basic rules for secure codes.....	7

1. Overview

The safe lock PRIMOR 2600 is installed as a standard lock in the WALDIS furniture safe 300 / 400 / 500.

1.1. Operating controls: WALDIS furniture safe

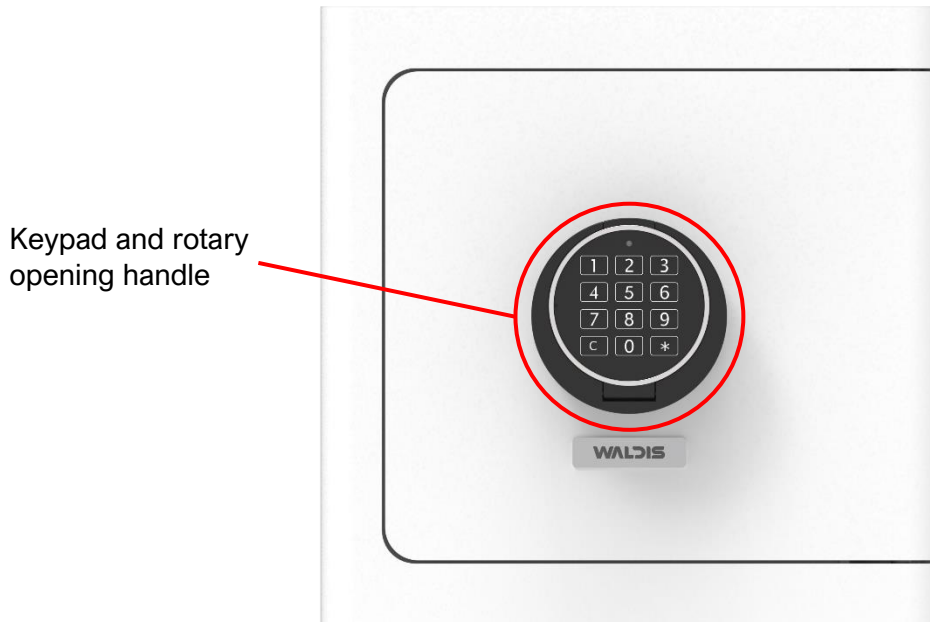

The ribbed outer ring of the keypad also functions as a rotary opening handle.

2. Starting to use your safe

As soon as the safe has been delivered and correctly anchored, you can start operating the lock and using the safe.

To do so, please keep to the following procedure:

1. Check that the keypad is in the "closed" position. Do this by applying gentle pressure to move the keypad counterclockwise into the end position.
2. Using the lug positioned on top of the keypad, carefully release the keypad from the input unit and fold it downwards.



3. Connect the 9V ALKALINE block battery to the cable located in the housing of the input unit, and insert the battery into the housing from the front.



4.

5. Fold the keypad back down until it engages in the housing of the input unit.

Insert the cable above the battery into the housing.

Avoid jamming the cable!



6. Enter the factory code (1-2-3-4-5-6) and turn the keypad clockwise into the end position.



7. Open the door.



8. Programme the new code as per section 3.3.

3. Operation

3.1. Opening the safe

To open the safe, please keep to the following procedure:

1. First, turn the keypad counterclockwise into the "closed" position to make sure that the lock bolt is relieved of pressure.
2. Enter the code and within 3 seconds **after** the double acoustic signal, turn the keypad into the "open" position.
3. Open the door.



3.2. Locking the safe

To close the safe, please keep to the following procedure:

1. Close the door (keypad in "open" position).
2. Turn the keypad counterclockwise into the "closed" position (lock closes automatically).



3. Gently turn the keypad clockwise to check whether the lock – and therefore the safe – are locked.



3.3. Reprogramming codes



NOTE: A new code must always be programmed with the door open, and it must be tested!

If the code has been forgotten or can no longer be reconstructed, an emergency opening of the safe must be performed and it must be repaired or replaced at the owner's expense!

What the acoustic signals mean

1x signal: Input accepted

2x signal: Code is correct

Long signal: Code is incorrect

Procedure:

1. Open the door with the current code (section 3.1.).
2. Leave the keypad in the "open" position.
3. Wait for 10 seconds.
4. On the keypad, press the "0" key until the red LED is lit continuously and you can hear a double acoustic signal.
5. Input the current code (double acoustic signal).
6. Input the new code (double acoustic signal).
7. Input the new code again to confirm (double acoustic signal).
8. With the door open, move the keypad counterclockwise into the "closed" position (lock closes automatically).
9. Enter the newly programmed code and open the lock again by moving the keypad clockwise.
10. Repeat steps 7 and 8 to make sure that the new code was accepted by the lock, and that it works.
11. If the test opening of the lock was successful, the new code has been programmed and the safe can be closed (section 3.2.).



NOTE: If errors occur when making the change or if there is a break of more than 10 seconds, the old code remains valid. You must start the programming procedure from the beginning again.

3.4. Replacing the battery

If it is necessary to replace the battery (section 4.1.), keep to the following procedure:

1. Purchase a battery (9V ALKALINE block battery)

Note the expiration date!



2. Using the lug positioned on top of the keypad, release the keypad by pulling it out of the input unit.



3. Carefully fold the keypad downwards.



4. Disconnect the old battery from the cable inside, and connect the new battery to the cable. Insert the battery and cable into the housing of the input unit.



Avoid jamming the cable!

5. Fold the keypad back up and apply gentle pressure to click it into the housing of the input unit:

Insert the cable above the battery into the housing.



4. Malfunctions

4.1. Battery

If there is insufficient battery voltage, a warning signal will sound several times in succession after you enter the code, and the red LED will flash on and off intermittently.

If you observe the warnings just mentioned, the 9 V block battery for the lock must be replaced as quickly as possible (section 3.4.).


4.2. Tamper block

After 4 invalid code inputs, the keypad is blocked for about 5 minutes. During this lockout time, a light signal will be seen every 10 seconds. If two more incorrect codes are entered again after the lockout time has elapsed, the lockout time of 5 minutes will start again. The lockout time ends as soon as the valid code has been entered correctly.

5. Anchoring

The furniture safe is supplied with two M10x30 hexagon head screws, two M10 washers and two M10x53 drive-in anchors.

For anchoring in the building wall, as well as in the building floor, follow the procedure below:

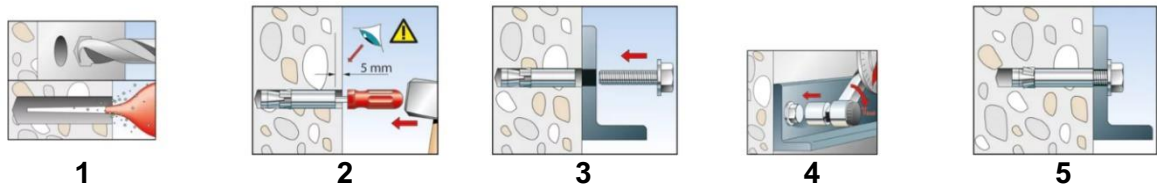

1. Position the furniture safe and mark the drilling positions.
2. Place the furniture safe to one side so that the drilling positions are easily accessible.
3. Drill holes $\varnothing 12$, 65mm deep. (1)
4. Vacuum the drilling dust from the drill holes. (1)
5. Insert the impact anchor into the drill holes and use a screwdriver to drive it in flush to the bottom of the hole. → The impact anchor should be recessed 5mm into the wall. (2)
6. Position the furniture safe in front of the drill holes and place the screws with washers flush against the safe housing from the inside → do not tighten! (3)
7. Tighten the screws to 25 Nm using a torque wrench. (4)
8. By tightening the screw correctly, the striking anchor is spread open and thus holds firmly in the wall. (5)

6. Basic rules for secure codes

What you should avoid:

- Don't use commonplace sequences such as 000000 or 123456.
- Don't use your own birthday, or any car registration numbers or phone numbers.
- Don't use a code that you already use elsewhere.

How should a code be structured?

- The code should not have a logical structure.
- Use all the keys, as far as possible (the keypad shows signs of wear over time, revealing the individual numbers used in the code).

Keeping a code secure:

- A code is only secure if it stays secret!
- You should memorise codes – don't write them down.
- Think how the code would still be kept available in case the person who has it is no longer able to disclose it (e.g. if they die). Deposit a sealed envelope with your notary.



NOTE: If the code has been forgotten or can no longer be reconstructed, the safe must be drilled open and repaired or replaced at the owner's expense!